




# Canon EOS 6D Analog Screen Replacement

Replace the top analog screen of your EOS 6D.

Written By: Justin Thomas

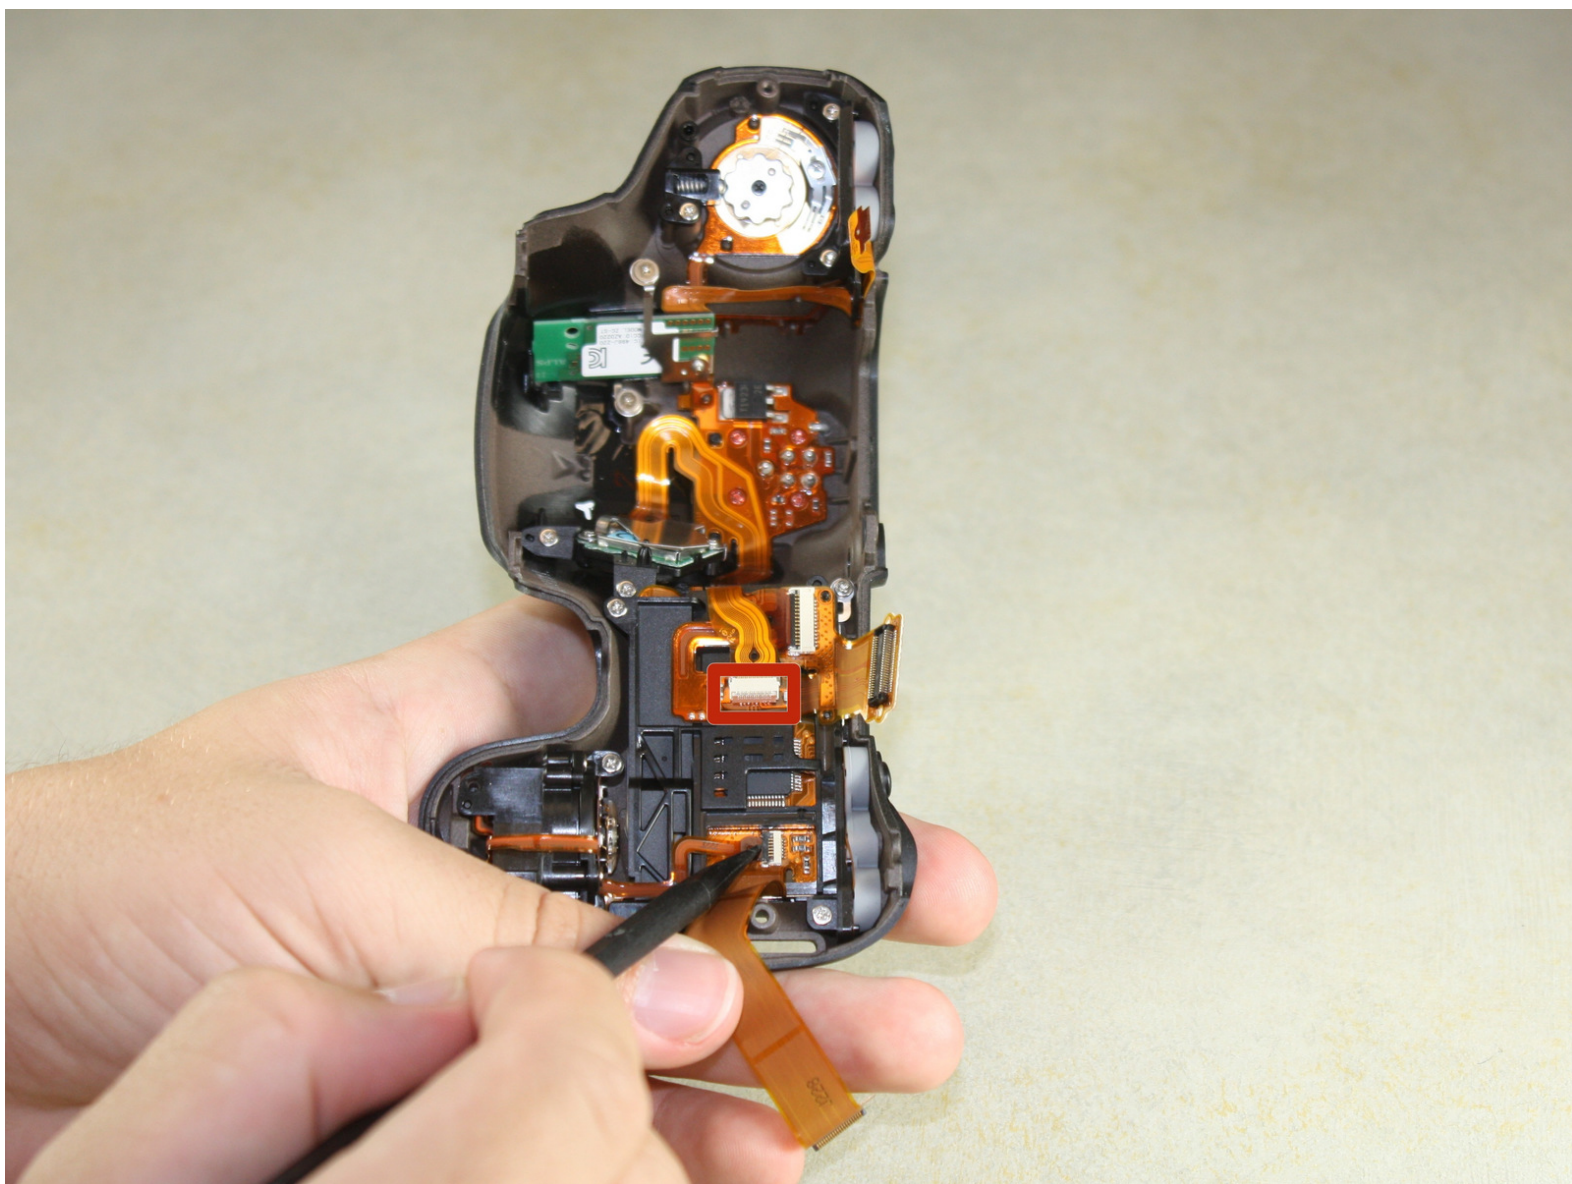

## INTRODUCTION

Use this guide to replace a cracked or malfunctioning top analog screen on your EOS 6D.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Rear Body Panel



- Remove the viewfinder cover by pinching the sides and sliding it upward.

## Step 2



- Open the battery door on the bottom of the camera.
- Use your thumb to slide the small black tab on the inside of the battery door up and pull the door off the camera.



### Step 3



- Slide your fingernail or the flat end of the spudger underneath the rubber covering and gently peel it off all sides of the camera.

### Step 4



- Open the covers to the HDMI/AV/MIC ports on the side of the camera by gently pulling outward on the bottom of the covers.
- Rotate the covers to the side so that you can see the connection ports inside.
- Remove the following screws:
  - Two silver 5mm Phillips #00
  - One black 6mm Phillips #00



## Step 5



- Remove the cover to the HDMI/AV/MIC ports by gently lifting the tab on the bottom edge of the camera.

## Step 6




- Rotate your camera so the bottom side is facing you.
- Remove the following screws:
  - Two 6mm Phillips #00
  - One 3mm Phillips #00


## Step 7



- Rotate your camera so the back is facing you.
- Remove the following screws:
  - Three silver 5mm Phillips #00
  - Two black 6mm Phillips #00
  - One black 4mm Phillips #00

## Step 8

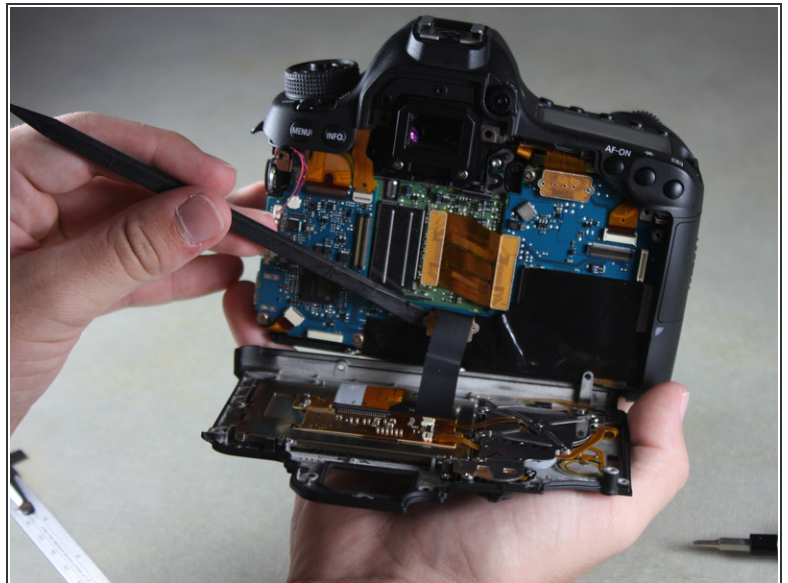

 A black ribbon wire connects the rear panel to the inside of the camera. Breaking this wire would make your rear screen and buttons non-functional.

- Carefully use your fingers to tilt the back panel downward to about a 90 degree angle.
- Use the flat end of the spudger to gently pry off the ribbon wire from the inside of the camera.



## Step 9 — Front and Top Body Panels



- Remove the 8mm Phillips #00 screw from the bottom of the front of the camera.

## Step 10



- Rotate the camera so the side opposite the HDMI/AV ports is facing you.
- Remove the 4mm Phillips #00 screw from the bottom edge of this side.



## Step 11



- Rotate the camera so the bottom is facing you.
- Remove the following screws:
  - Two 8mm Phillips #00
  - One 4mm Phillips #00

## Step 12



- Remove the bottom panel from the camera by using your fingers to pull outward on the tab inside the battery compartment.

## Step 13



- Rotate the camera so the front is facing you.
- Remove the following screws:
  - Three 5mm Phillips #00
  - Two 6mm Phillips #00
  - One 4mm Phillips #00

## Step 14




- Rotate the camera so the side opposite the HDMI/AV ports is facing you.
- Remove the following screws:
  - One 4mm fine-thread Phillips #00
  - Two 4mm coarse-thread Phillips #00



## Step 15



 The red speaker wire is attached to the inside of the front panel. Opening the front panel forcefully may break it.

- Slowly fold the front panel to the right without pulling it away from the right edge of the camera.


## Step 16



- Remove the 4mm Phillips #00 screw on the inside of the front panel to separate the panel from the speaker wire.



## Step 17

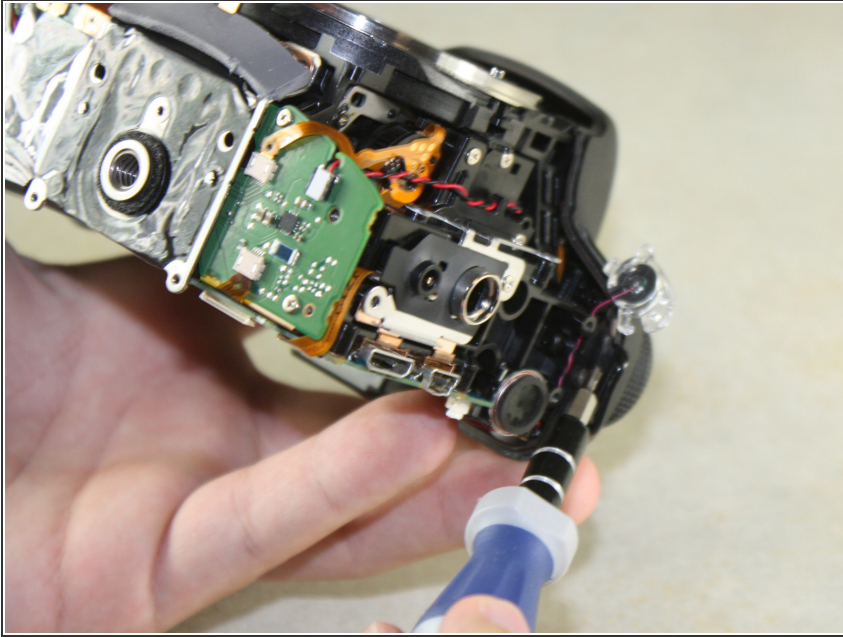

- Remove the 4mm Phillips #00 screw from the inside of the top panel, below the strap hook.

## Step 18



- Remove the 4mm Phillips #00 screw from the inside of the top panel, below the shutter button.

## Step 19



- Rotate the camera so the top is facing you.
- Remove the 6mm Phillips #00 screw from next to the analog screen.


## Step 20



- Rotate the camera so the back is facing you.
- Remove the Phillips #00 screw from the viewfinder focus.




## Step 21

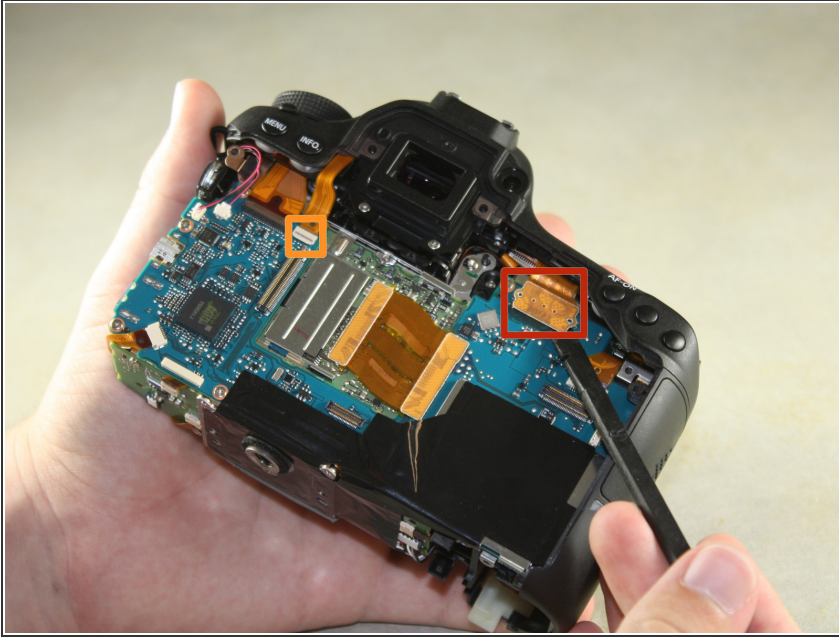

- Carefully detach the two light brown ribbon wires on the top panel:
  - The right ribbon by prying it out with the flat end of the spudger.
  - The left ribbon by using tweezers to gently wiggle it out toward the top.

## Step 22

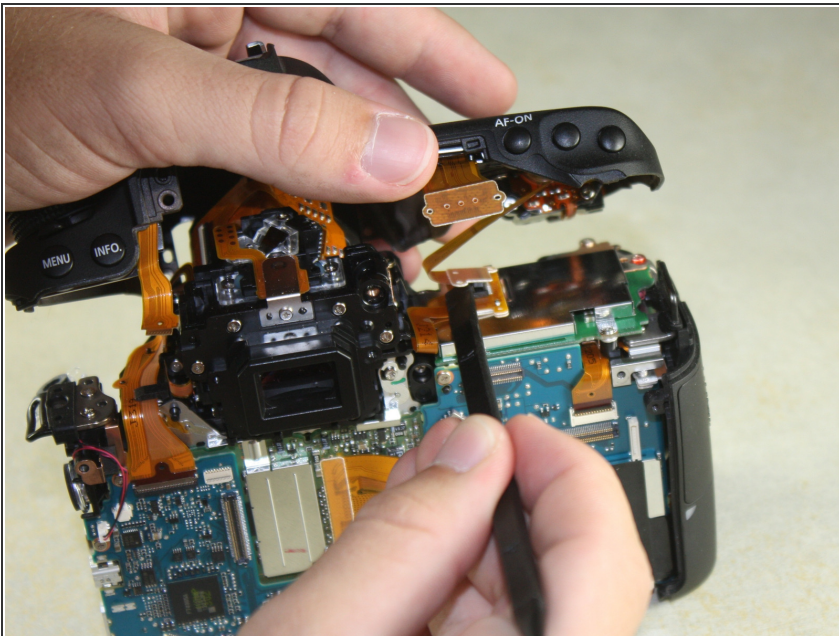

- ⚠ A ribbon wire connects the inside of the top panel to the body of the camera.
- Slowly lift the top panel to about an inch above the body of the camera.
- Carefully use the flat end of the spudger to detach the ribbon wire from the top of the camera.




## Step 23



- Grip the remaining side panel with your fingers and gently pop it off the camera.

## Step 24 — Analog Screen

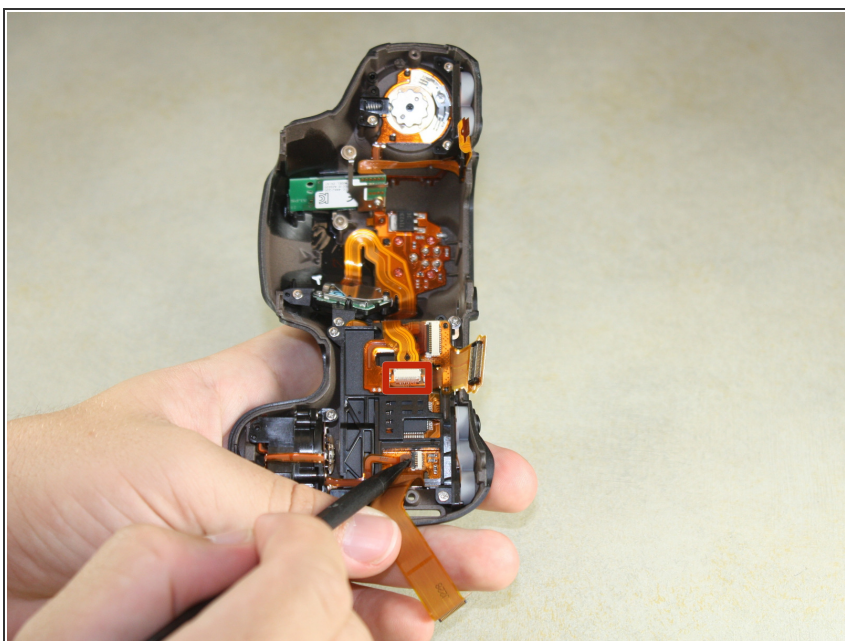


- Use the pointed end of the spudger to flip up two silver ribbon wire latches on the inside of the top panel.

## Step 25



- Use the pointed end of the spudger to slide out the two light brown ribbon wires.


## Step 26

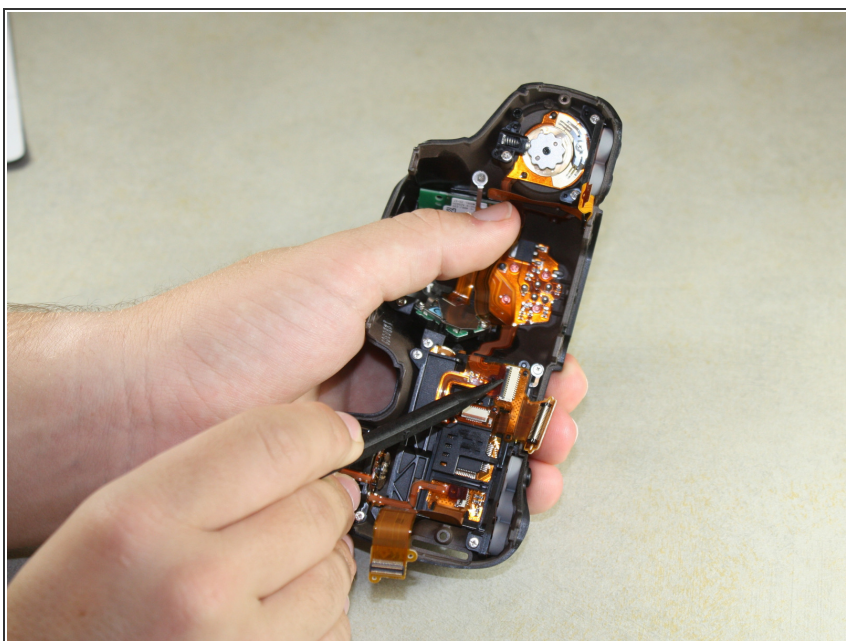

- Use the pointed end of the spudger to carefully remove the third light brown ribbon wire.





## Step 27

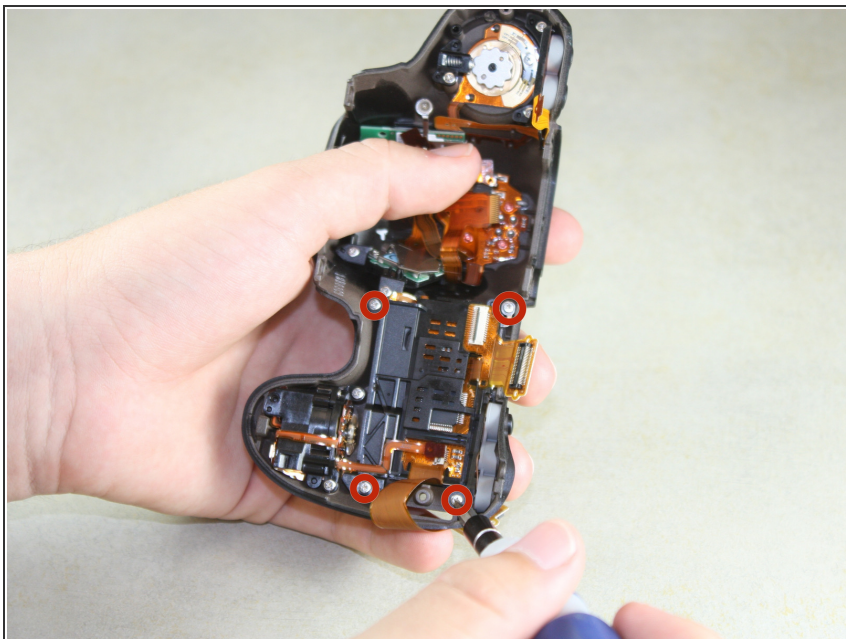

- Remove four 5mm Phillips #00 screws from the inside of the top panel.

## Step 28

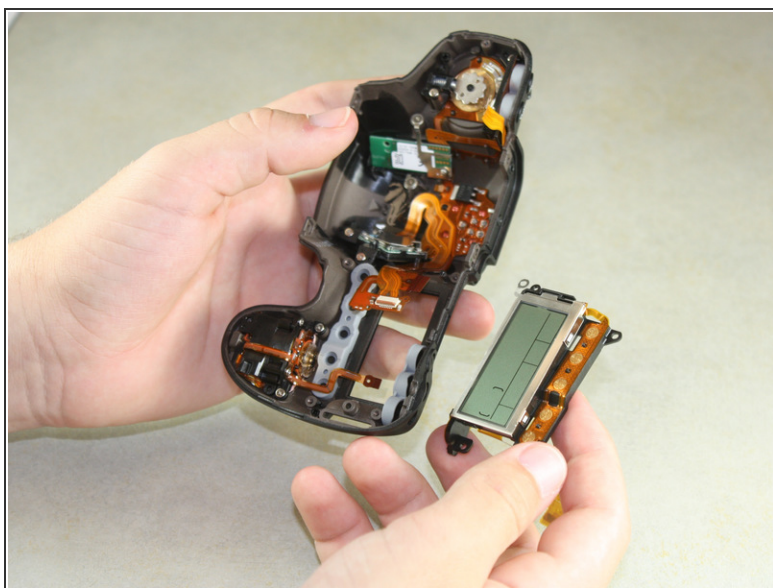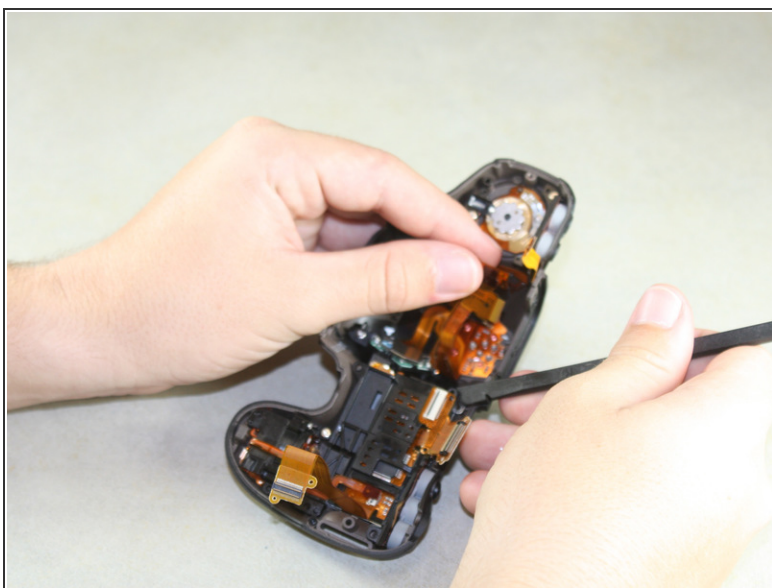

- Carefully slide the flat end of the spudger underneath the screen and lift it out.

To reassemble your device, follow these instructions in reverse order.



